



INSTALLATION INSTRUCTIONS

**Tech Support
856-768-5700 EXT 2
TechSupport@LEDGlow.com**

LEDGLOW 4x9" INTERIOR KIT

Limited Warranty and Disclaimer

All LEDGlow Lighting, LLC. products come with a one year limited warranty on the internal parts of the product. This warranty starts from the date of purchase. LEDGlow Lighting, LLC. will replace or repair any qualifying defective product received by the company before the end of the warranty period. Installation of this product must be performed by a licensed professional. Should the failure of the product be the result of damage occurring as a result of improper installation, alteration of the product or an act or omission on the part of the consumer, this warranty is void. LEDGlow Lighting, LLC. shall not be responsible for any consequential damages which arise from the use and/or installation of the product. If the kit is installed in any manner other than specified, LEDGlow Lighting, LLC. reserves the right to deny any warranty claims at the discretion of the technical support department. The one year warranty is not transferable and is valid for up to one year from the original date of purchase. Any product return must include the original packaging, a statement of the alleged defect and an RMA number must be provided. All RMA numbers are valid for 14 days from issued date. Upon receipt of the returned product, the company will test the product for defect. If the results of the testing do not support the warranty claim, do not reveal any defect or indicate consumer negligence in the installation and handling of the product, then the product will be returned to you and you will be charged a reshipping fee. If the product is returned from an address within the continental United States, within the first 14 days after purchase, and is found to be defective, LEDGlow Lighting, LLC. will cover the cost of the return shipping with an emailed return label. This offer is only valid for the continental US. All international shipping, customs fees and/or duty charges are solely the responsibility of the consumer.

Additional Disclaimer Terms

Lights are for off road use only; please check your local and state laws for the proper use of this product.

- Improper installation of electricity-using products such as lighting may cause damage to any vehicle or device to which the improperly handled or installed lighting is attached.
- Improperly installed product may cause electrical injury to persons.
- It is recommended that the kit be installed by a licensed professional.
- LEDGlow Lighting, LLC. assumes no liability for the installation of the product.
- Warranty or liability will not exceed the product purchase price which shall be the buyer's sole and exclusive remedy.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE WARRANTIES DESCRIBED ON THE FACE HEREOF INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. (LEDGlow Lighting, LLC. AT IT'S DISCRETION, MAY PROVIDE REMEDY OF RETURN OF PURCHASE PRICE OR REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCT AS BUYERS SOLE AND EXCLUSIVE REMEDY.)

LEDGlow Lighting, LLC.
150 Cooper Road - Suite A-2 West Berlin, NJ 08091



INSTALLATION INSTRUCTIONS

**Tech Support
856-768-5700 EXT 2
TechSupport@LEDGlow.com**

LED Interior Installation

- Depending on your vehicle and knowledge of automotive wiring, choose the appropriate wiring method.
- Arrange the tubes out on the ground the way you plan to install them on the vehicle. Test the kit to ensure proper functionality before installing.

Connecting to a Fuse Panel

If you choose to wire the interior kit to an automatically switched ignition source in your vehicle, you must first locate the fuse for such a source. You may need your owner's manual or the help of a mechanic.

Choose a fused source with at least a 10 amp fuse for the kit; anything less may blow the fuse with the kit installed and running.

Next, run the positive power wire (red) directly to a fuse slot in your vehicle's fuse panel and insert it on one side of the fuse slot. * Make sure not to bridge the fuse with the wire or it will render the fuse useless in the event of a short circuit in your vehicle. You may also purchase a replacement fuse with accessory wire attached to one side at an automotive parts store.

Finally the ground wire (black) may be connected to any ground source or any bare metal on the vehicle.

Connecting Directly to a Battery

Needed Parts: 16 or 18 Gauge wire with an inline fuse

The kit can also be wired directly to your vehicle's 12 volt battery considering it has its own power switch. It is recommended on the positive wire that there be a fuse within 10 inches from the battery in case of a short circuit.

Again, the negative wire can be connected to the negative post of the battery or to any ground source that is not painted, greased, rusted or corroded. Any bare metal on the vehicle will be sufficient.

Connecting to a Miscellaneous Accessory Wire

This interior kit can also be connected to any 12 volt source in your vehicle. You can connect to existing connections including the head unit, head lights, amplifier or cigarette lighter wiring.

Auto on and off function with a switched source.

This kit has the ability to be turned on and off with the power button located on the control box or it can be set to turn on with a switched source such as the ignition or the door switch.


- To enable the auto on and off function simply turn off the kit and press the MODE button for 3 seconds. When you turn the kit back on it will be in the auto on and off mode which will allow a switched source such as your door switch or ignition switch to control the kit. Every time the source receives a power signal the light will turn on.
- To disable this function simply turn off the kit and press the SOUND button for 3 seconds. Once the kit is turned back on, only the on and off button will be able power the kit when it is connected to a power source.

INSTALLATION INSTRUCTIONS



Tech Support
856-768-5700 EXT 2
TechSupport@LEDGlow.com

Controller Diagram

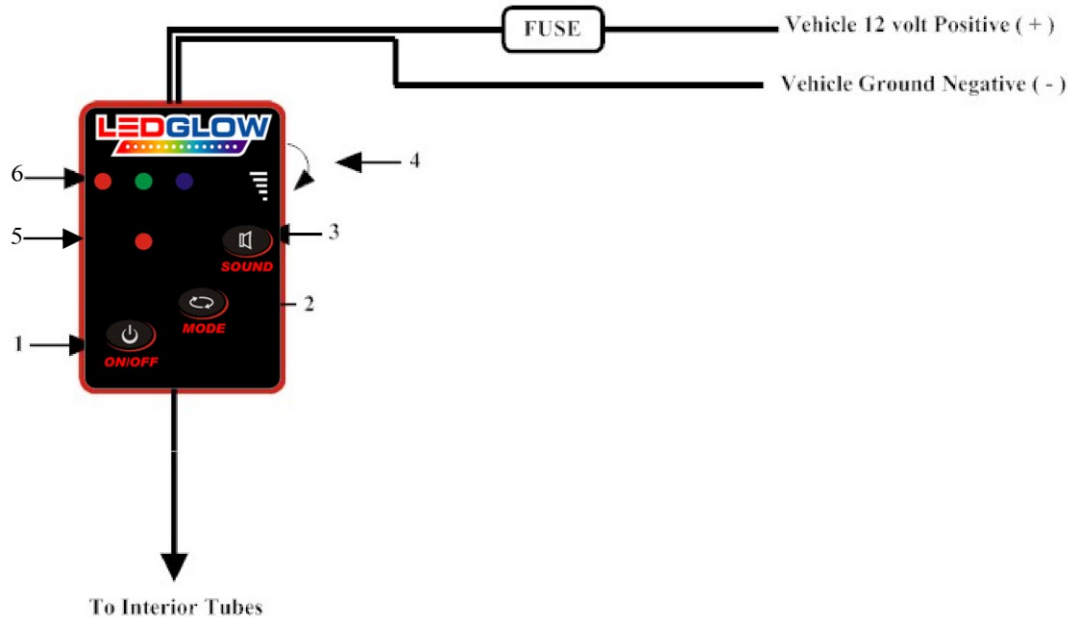

Buttons / Controls for the Single Color Kit

1. ON / OFF button – Controls Power to the Kit
2. MODE: There are 15 modes for this kit:
 1. Slow LED bulb fade
 2. LED solid illumination
 3. LED intermediate fade
 4. LED fast fade
 5. Ascending LED slow fade
 6. Ascending LED intermediate fade
 7. Ascending LED fast fade
 8. Rapid LED scan
 9. 6 LED solid illumination position 1
 10. 6 LED solid illumination position 2
 11. 6 LED solid illumination position 3
 12. 12 LED solid illumination position 1
 13. 12 LED solid illumination position 2
 14. 12 LED solid illumination position 3
 15. 18 LED solid illumination
3. SOUND: Press this button to initialize the sound controlled function
 - The lights will display a steady flash while in music mode. As the vibration of the music intensifies, the LED's will flash faster.
4. Sound sensitivity adjustment
 - Adjust the wheel on the side of the control box to increase or decrease the sensitivity.
5. Power indicator
6. NOT USED

Buttons / Controls for the 7 Color Kit

1. ON / OFF button – Controls Power to the Kit
2. MODE: There are 15 modes for this kit:
 1. Slow LED color fade
 2. LED color pause
 3. LED intermediate color fade
 4. LED fast color fade
 5. Ascending LED slow color fade
 6. Ascending LED intermediate color fade
 7. Ascending LED fast color fade
 8. Rapid LED color scan
 9. Red LED solid illumination
 10. Green LED solid illumination
 11. Blue LED solid illumination
 12. Yellow LED solid illumination
 13. Purple LED solid illumination
 14. Aqua LED solid illumination
 15. White LED solid illumination
3. SOUND: Press this button to initialize the sound controlled function
 - Initially, the lights will display a steady flash of blue while in music mode. As the vibration of the music intensifies, the colors will change and flash faster.
4. Sound sensitivity adjustment
 - Adjust the wheel on the side of the control box to increase or decrease the sensitivity.
5. Power indicator
6. Color indicator