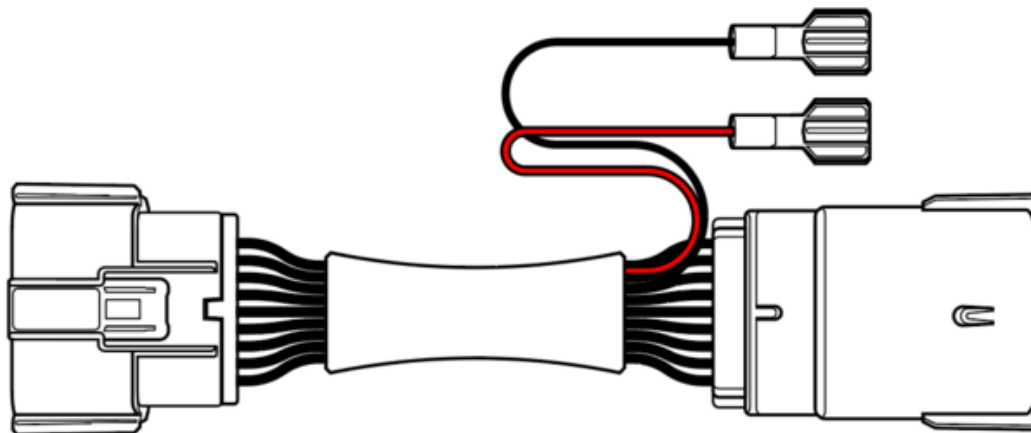


**Headlight Accessory Add-On Harness for 2017-2019 Ford Super Duty****Part # LU-A-FGL-WH-03**

**Note:** This add-on harness is designed to easily integrate 12-volt accessories controlled by the vehicle's running lights equipped with factory LED headlamps. For a larger amp-draw accessory, a relay must be installed to supply adequate voltage to the accessory.

1. Remove the driver's side inner wheel well using a t30 torx, 5.5mm socket, and a panel pop tool.
2. Locate and unplug the connector on the back of the driver's side headlight.
3. Plug the add-on harness into the back of the driver's side headlight.
4. Plug the factory harness into the pass-through harness
5. If you are installing a relay kit, follow the installation instructions for the relay kit that you are using and connect the Red Wire from the pass-through harness to the relay trigger.
6. Connect the Black Wire from the pass-through harness to the ground of the accessory.
7. Be sure to secure any loose wiring with zip ties away from the heat of the radiator and moving parts.
8. Reinstall the inner wheel well.